

M85AMOX0501WG M85MOX11001S
M85AMOX0551WG M85MOX40501S
M85AMOX0601WG M85MOX40601S
M85AMOX0701WG M85MOX40651S
M85MOX10501S M85MOX40701S
M85MOX10501S1 M85MOX40801S
M85MOX10551S M85MOX41001S
M85MOX10601S M85MOX41101S
M85MOX10601S1 M85MOX50701WG
M85MOX10651S M85MOX50801WG
M85MOX10701S M91AMOX0501WG
M85MOX10701S1 M91AMOX0701WG
M85MOX10801S

AM · PM X-JOY







500x700x30
550x700x30
600x700x30
650x700x30
700x700x30
800x700x30
1000x700x30

500x700x30
600x700x30
700x700x30

ø500x30
ø600x30
ø650x30
ø700x30
ø800x30
ø1000x30
ø1100x30

628x672x30
655x752x30

230 V
50/60Hz

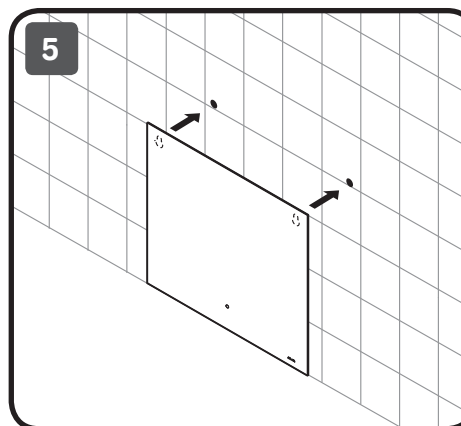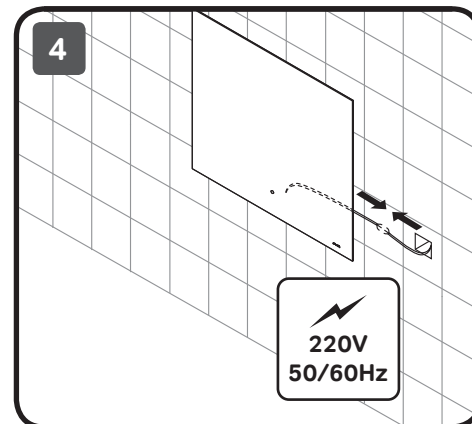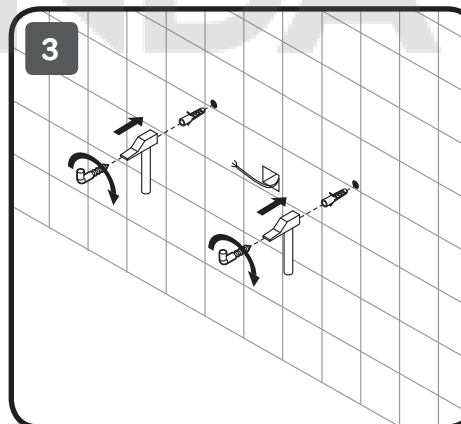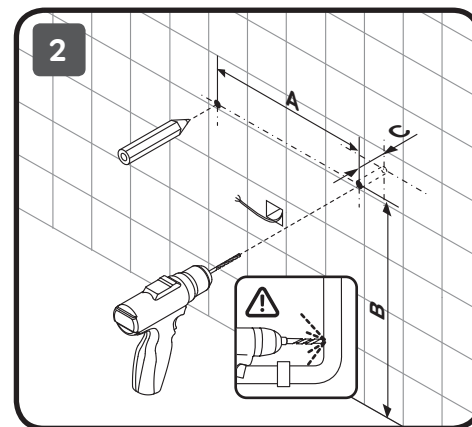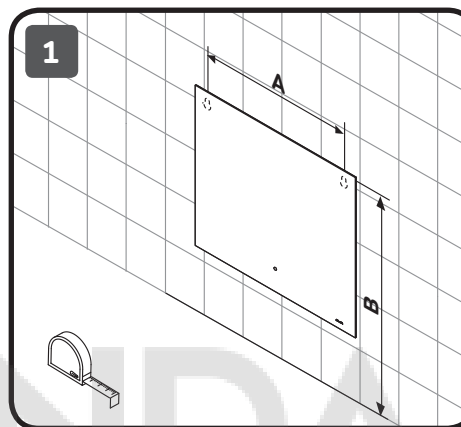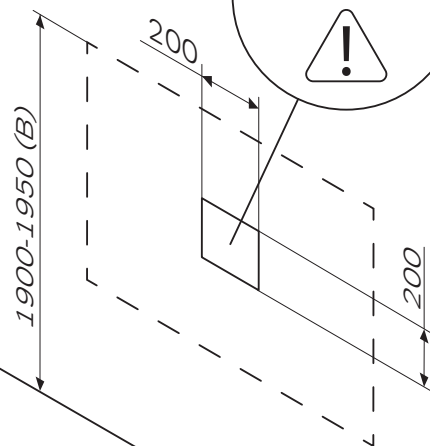

Чтобы включить или выключить подсветку зеркала, проведите рукой рядом с инфракрасным датчиком. Изменение яркости подсветки: Удерживайте ладонь перед ИК-датчиком, пока не будет достигнута желаемая яркость.

