

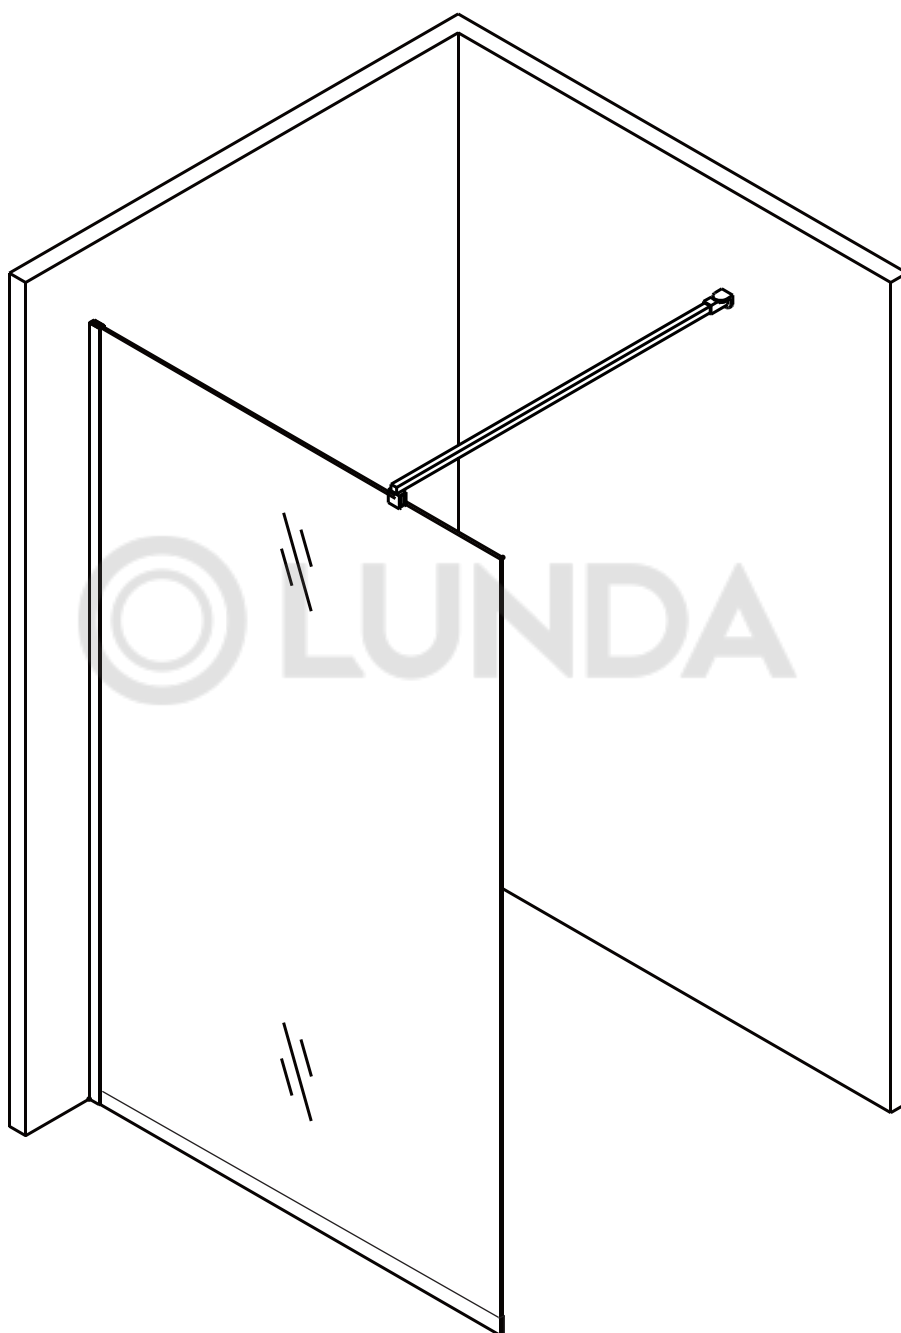
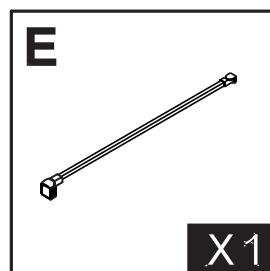
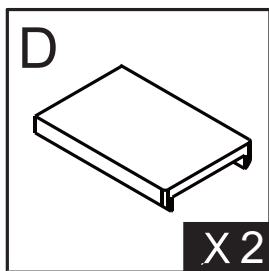
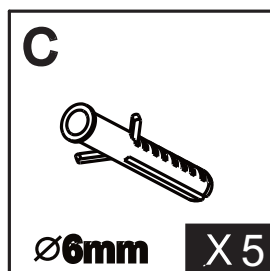
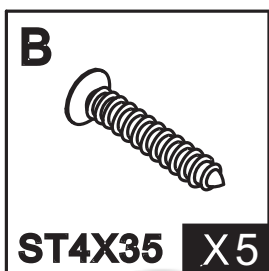


Руководство по монтажу душевых перегородок AM.PM Func






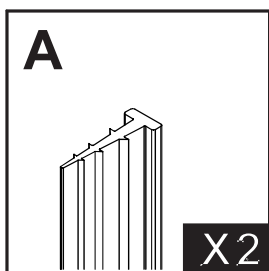


W84WI-80-200MT
W84WI-80-200BT
W84WI-90-200MT
W84WI-90-200BT
W84WI-100-200MT
W84WI-100-200BT


W84WI-110-200MT
W84WI-110-200BT
W84WI-120-200MT
W84WI-120-200BT

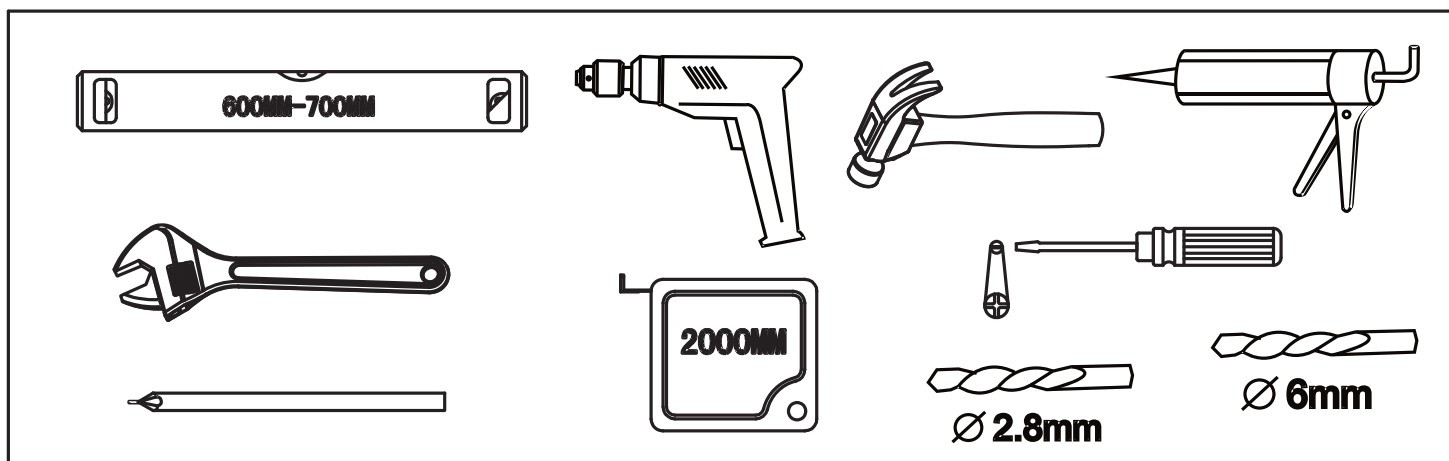

© LUNDA

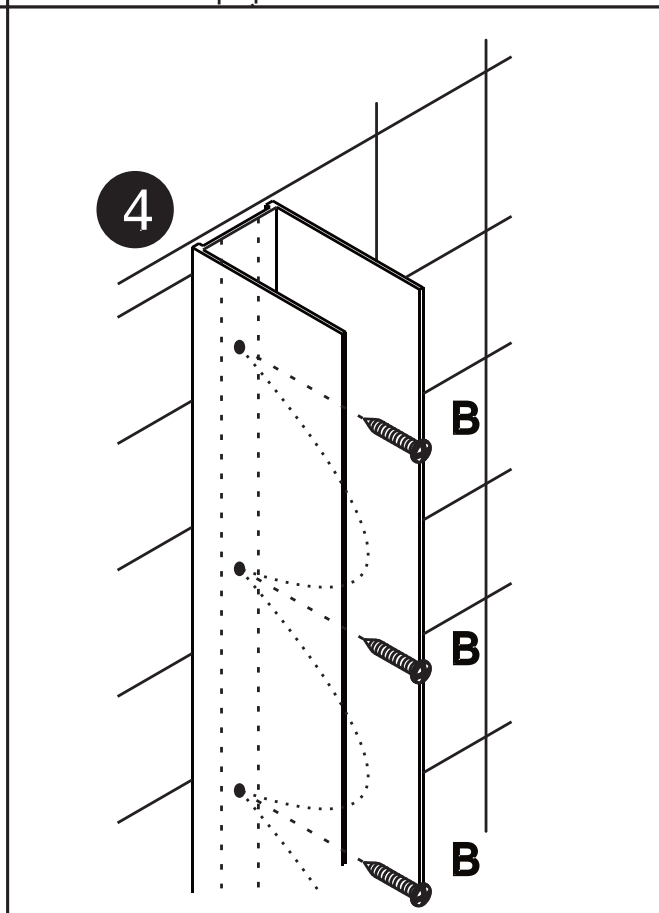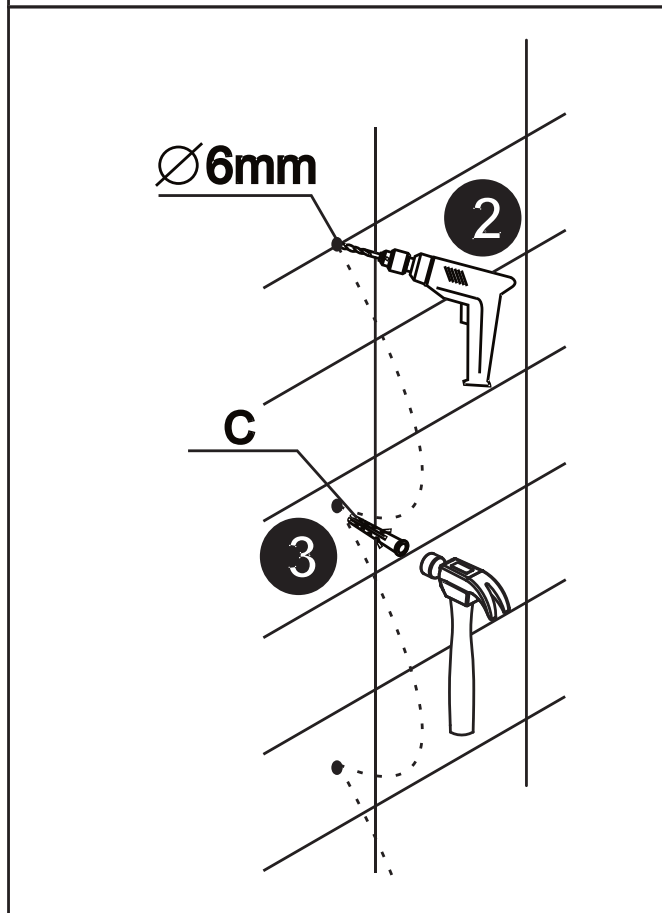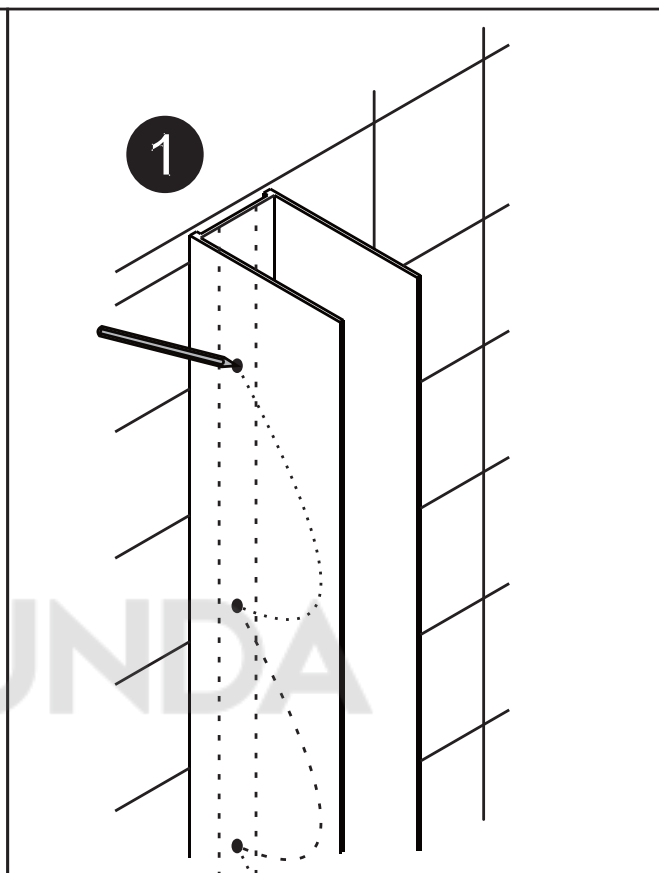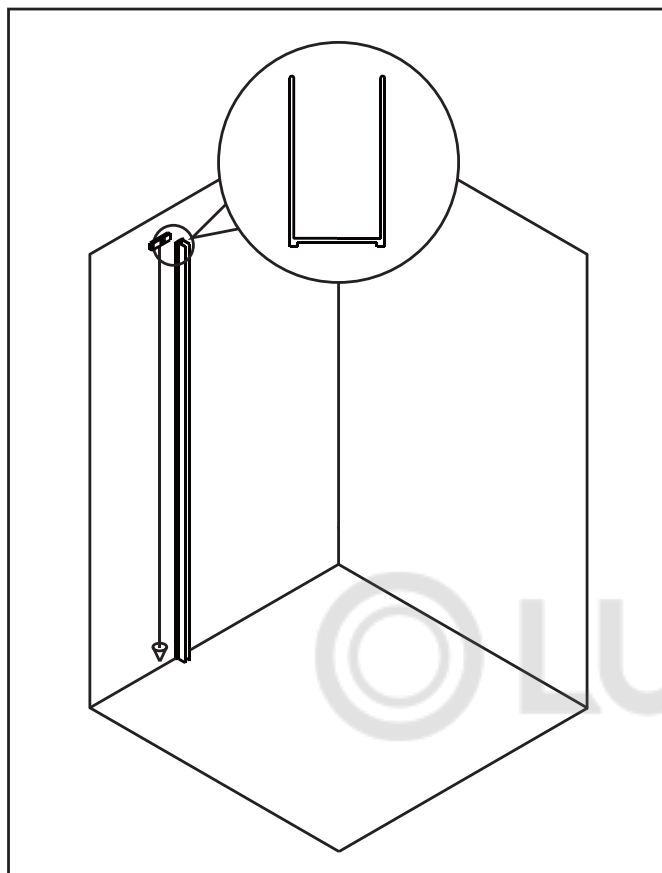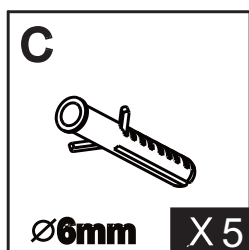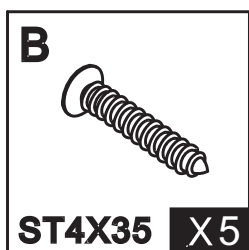

A



X2

